

Tyron Multibands Measuring Pack

Use these profile keys to
determine the band you need



TYRON

Flat Tyre Protection



Valve side
(outside)
of wheel

Wheel diameters
15" - 20"

Width: 75mm

BLUE

TYRON

Flat Tyre Protection

TYRON *Using the Sizing Keys*

Flat Tyre Protection

Unless otherwise requested, we supply MultiBands with the blue feet and for Commercial Wheels the Yellow feet as this covers the majority of wheels.

Therefore, use the **BLUE** Multiband sheet or the **YELLOW** Commercial Multiband sheet (See height adjustment - if needed)



The 65mm key is too wide as it touches both sides



The 57.5mm key **WOULD** fit, as it touches only **ONE** side



However, we would recommend going down a size and use the 50mm

Still having trouble deciding on the size of bands you require?


You can always send us an accurate profile drawing of your wheel and we will tell you the correct size of bands you need to fit.



Profile Gauge
(Prod. No. TR341)




Using the gauge to profile the cross section of the wheel

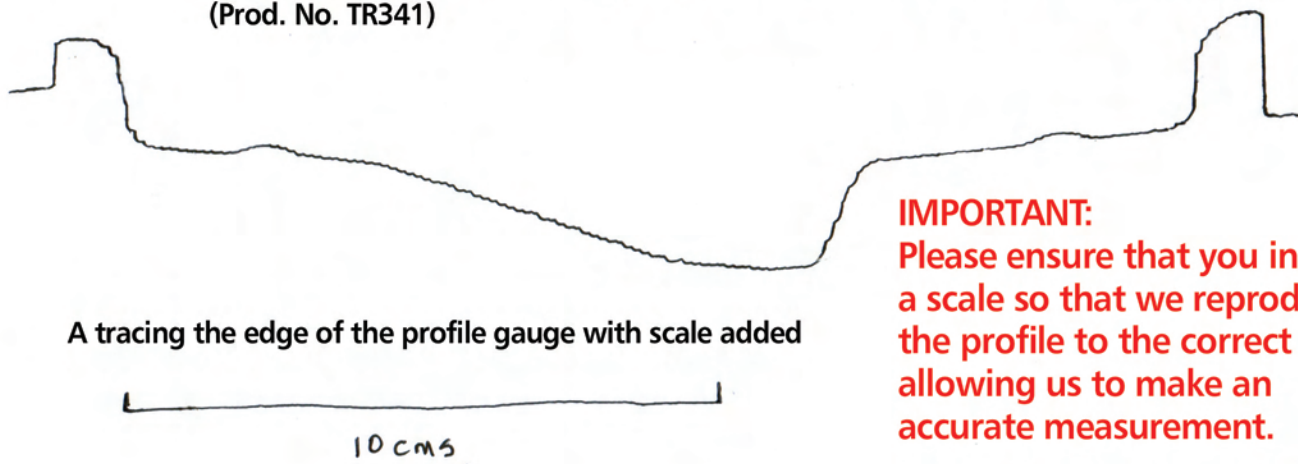

A tracing the edge of the profile gauge with scale added

IMPORTANT:
Please ensure that you include a scale so that we reproduce the profile to the correct size allowing us to make an accurate measurement.

The Tyron MultiBand has the unique patented plug in feet allowing us to compensate for different depth of wheel well.

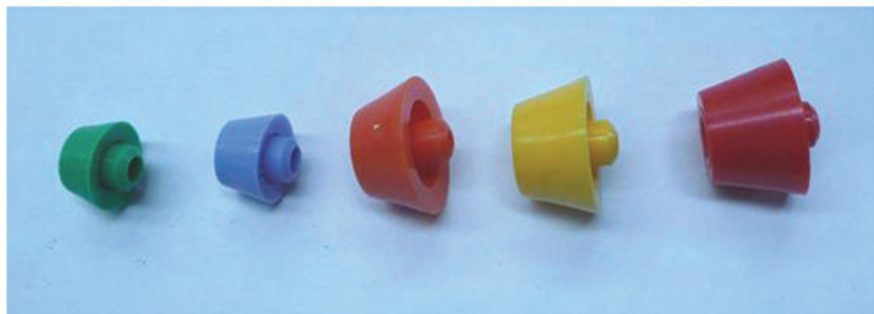

Below, the Yellow foot is correct – Red may be too high and with the Orange both sides will be resting on the wheel and the feet will not be supporting the band.



If the well is shallow and it is difficult to put in the fixings then the band is standing too high and the next foot size down would be needed. If the feet are too short you will notice that the fixing ends are drawn close together compensating for the smaller diameter – in the instance below, the blue foot is correct – it is important to check that the feet are standing in the well and supporting the band.






Special TPMS brackets are available to fit around wheel sensors if you have a Tyre Pressure Monitoring System fitted.



TYRON Sizing Keys

Flat Tyre Protection for Multibands

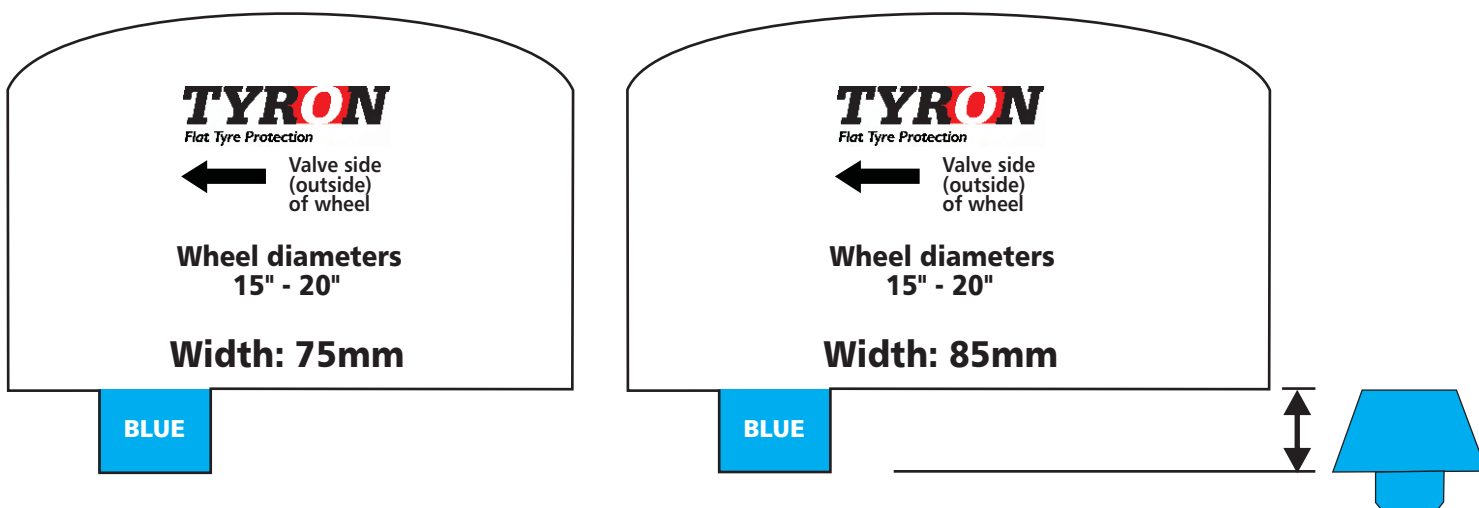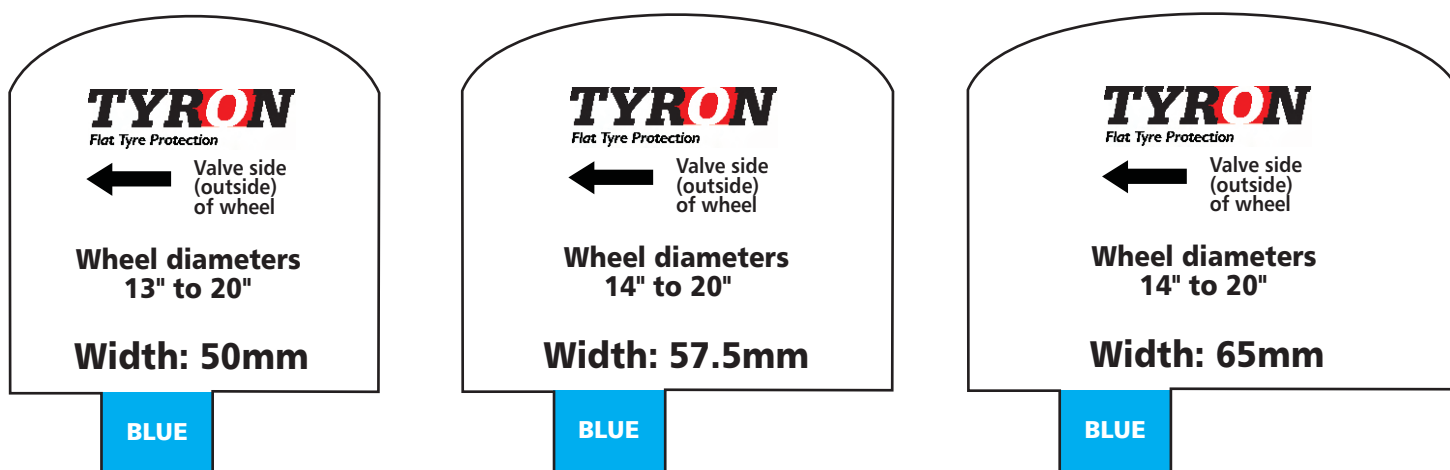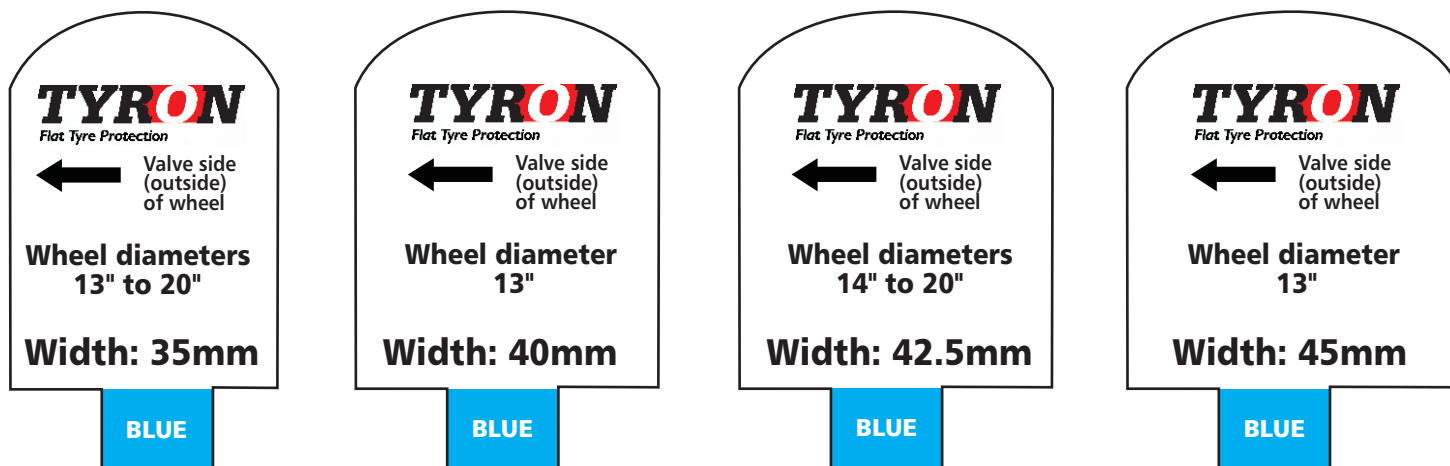

Blue Foot - 11mm



IMPORTANT

The base of the key **MUST** sit squarely on the bottom of the wheel's well.


VERY IMPORTANT

Ensure that the keys are the correct size when printed by checking the scales below



TYRON Sizing Keys

Flat Tyre Protection for Multibands

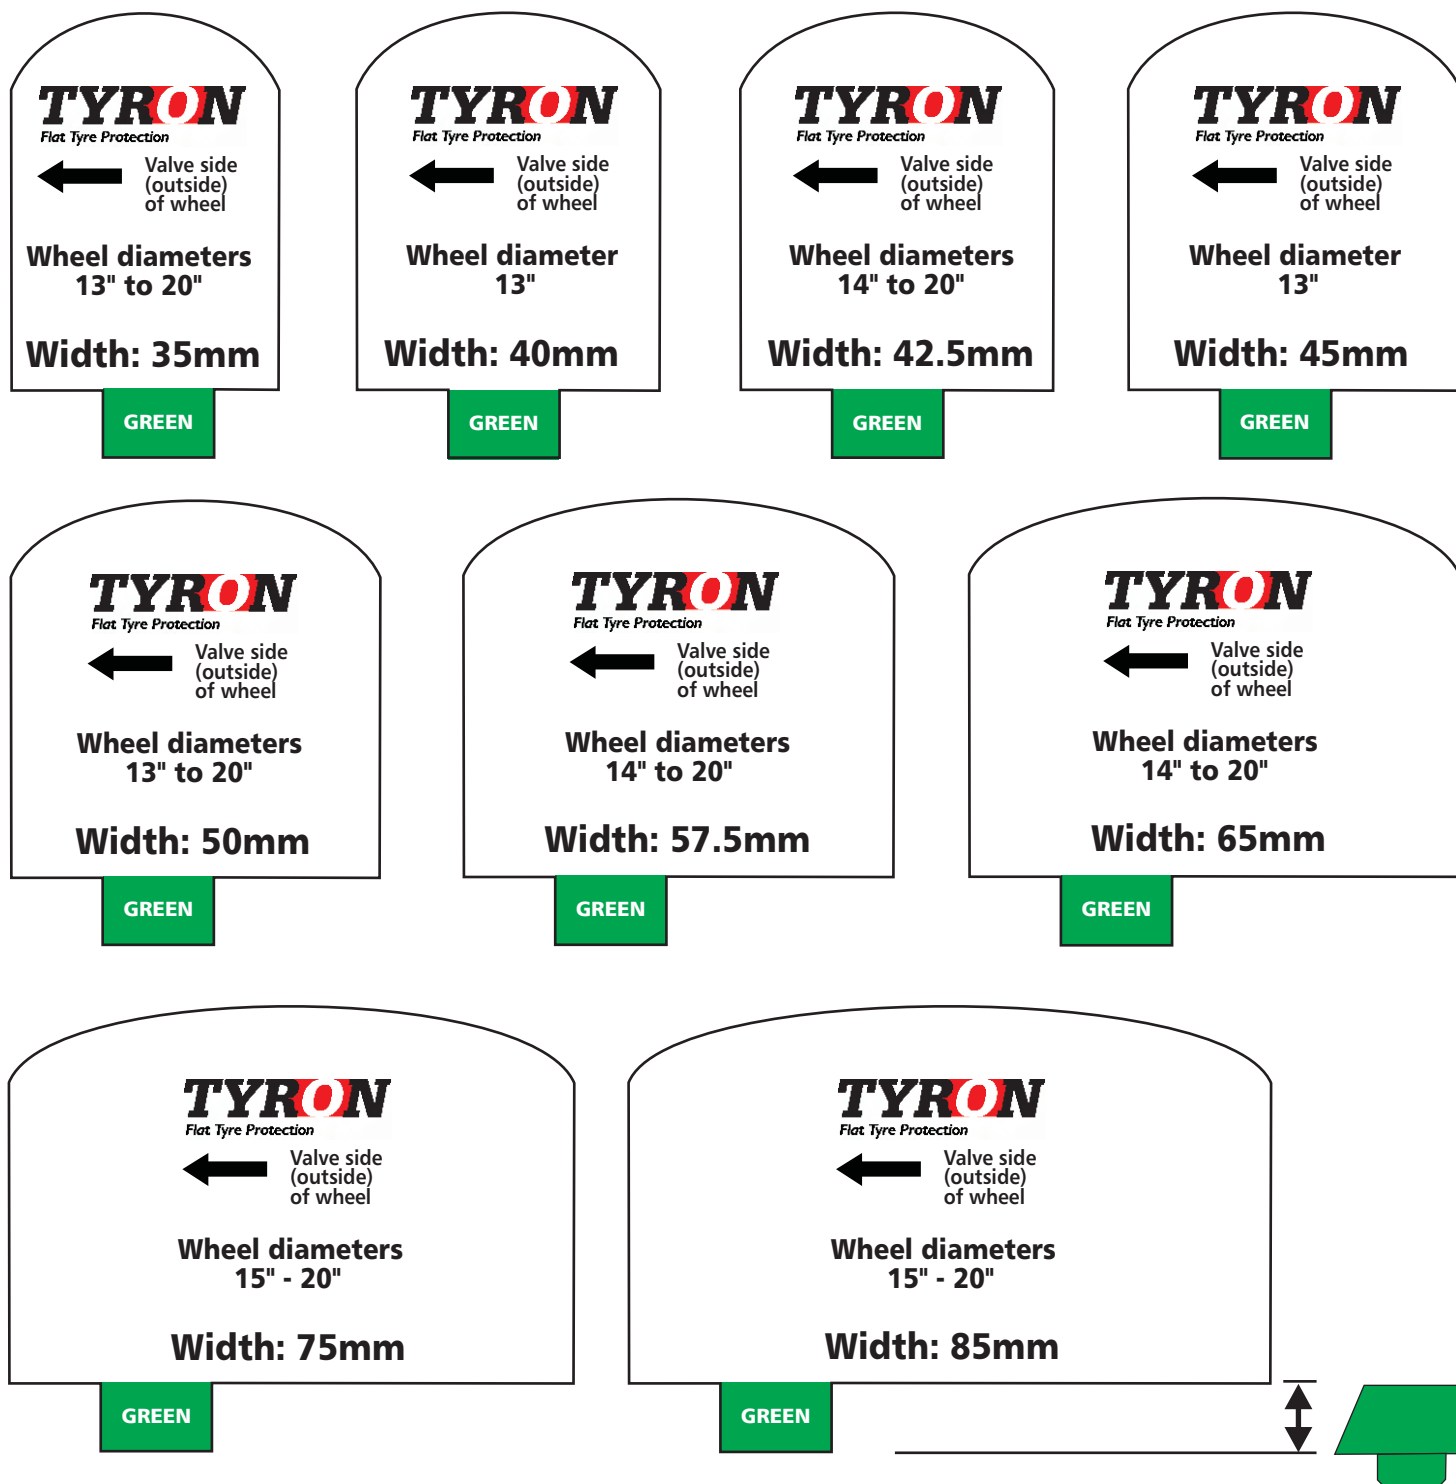

IMPORTANT

The base of the key MUST sit squarely on the bottom of the wheel's well.


VERY IMPORTANT

Ensure that the keys are the correct size when printed by checking the scales below

30mm	2 inches
------	----------

TYRON Sizing Keys

Flat Tyre Protection for COMMERCIAL Multibands

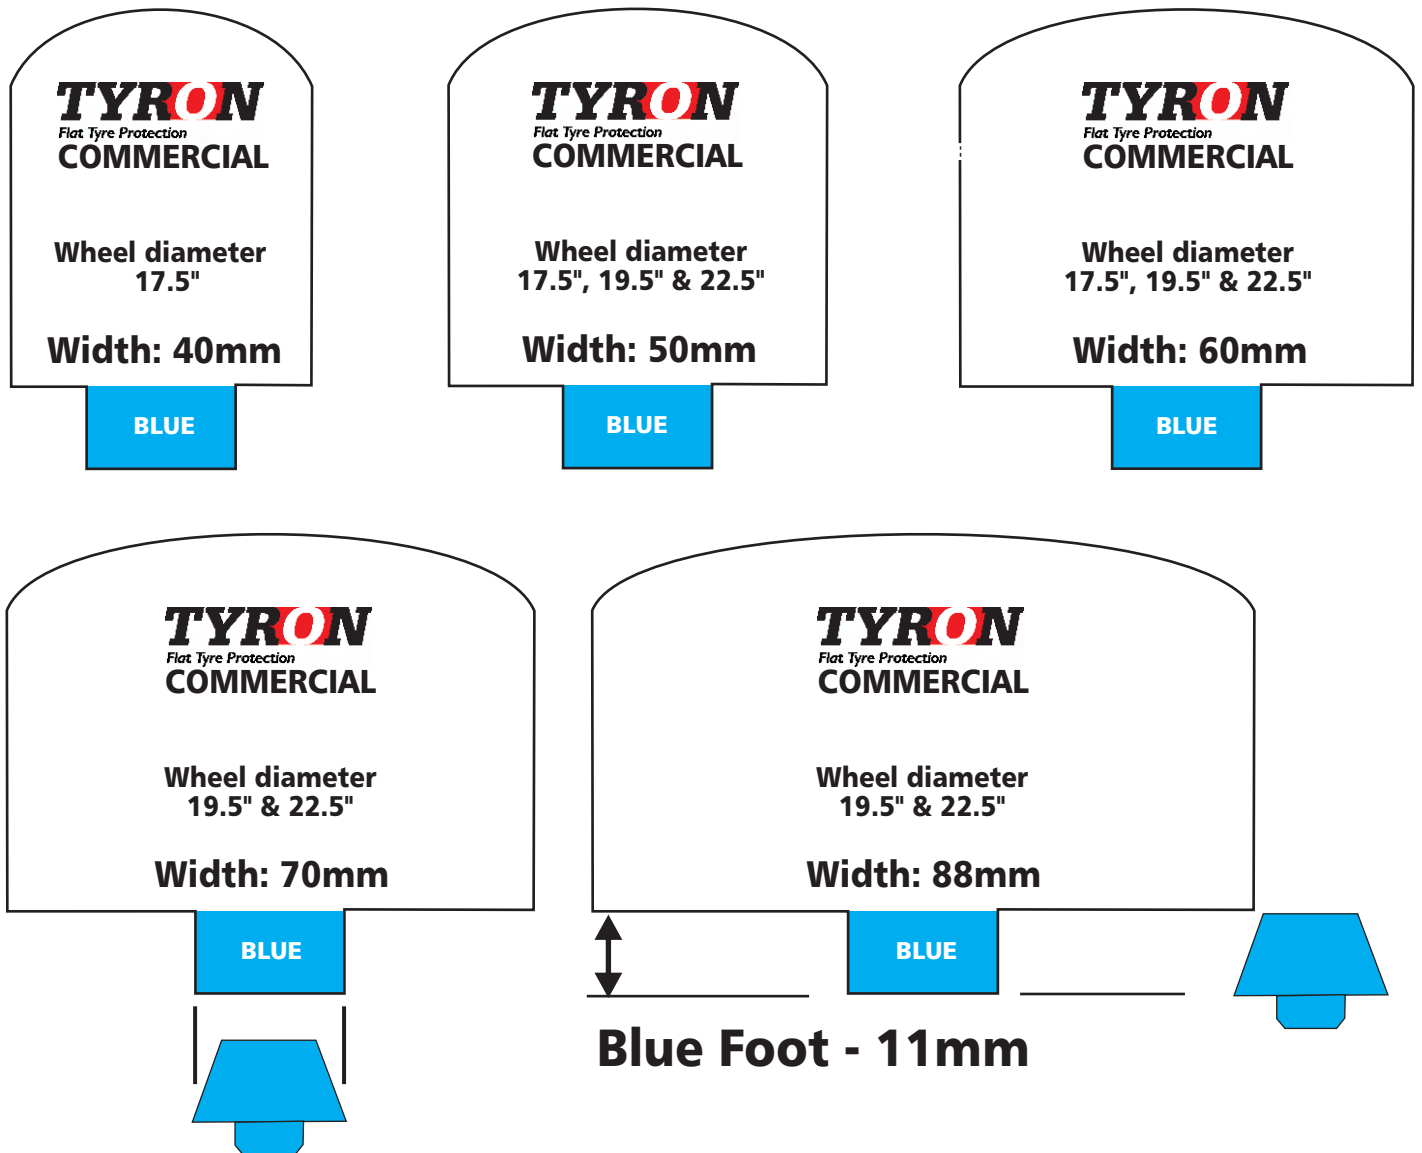

IMPORTANT

The base of the key **MUST** sit squarely on the bottom of the wheel's well.


VERY IMPORTANT

Ensure that the keys are the correct size when printed by checking the scales below

30mm 2 inches

TYRON Sizing Keys

Flat Tyre Protection for **COMMERCIAL** Multibands

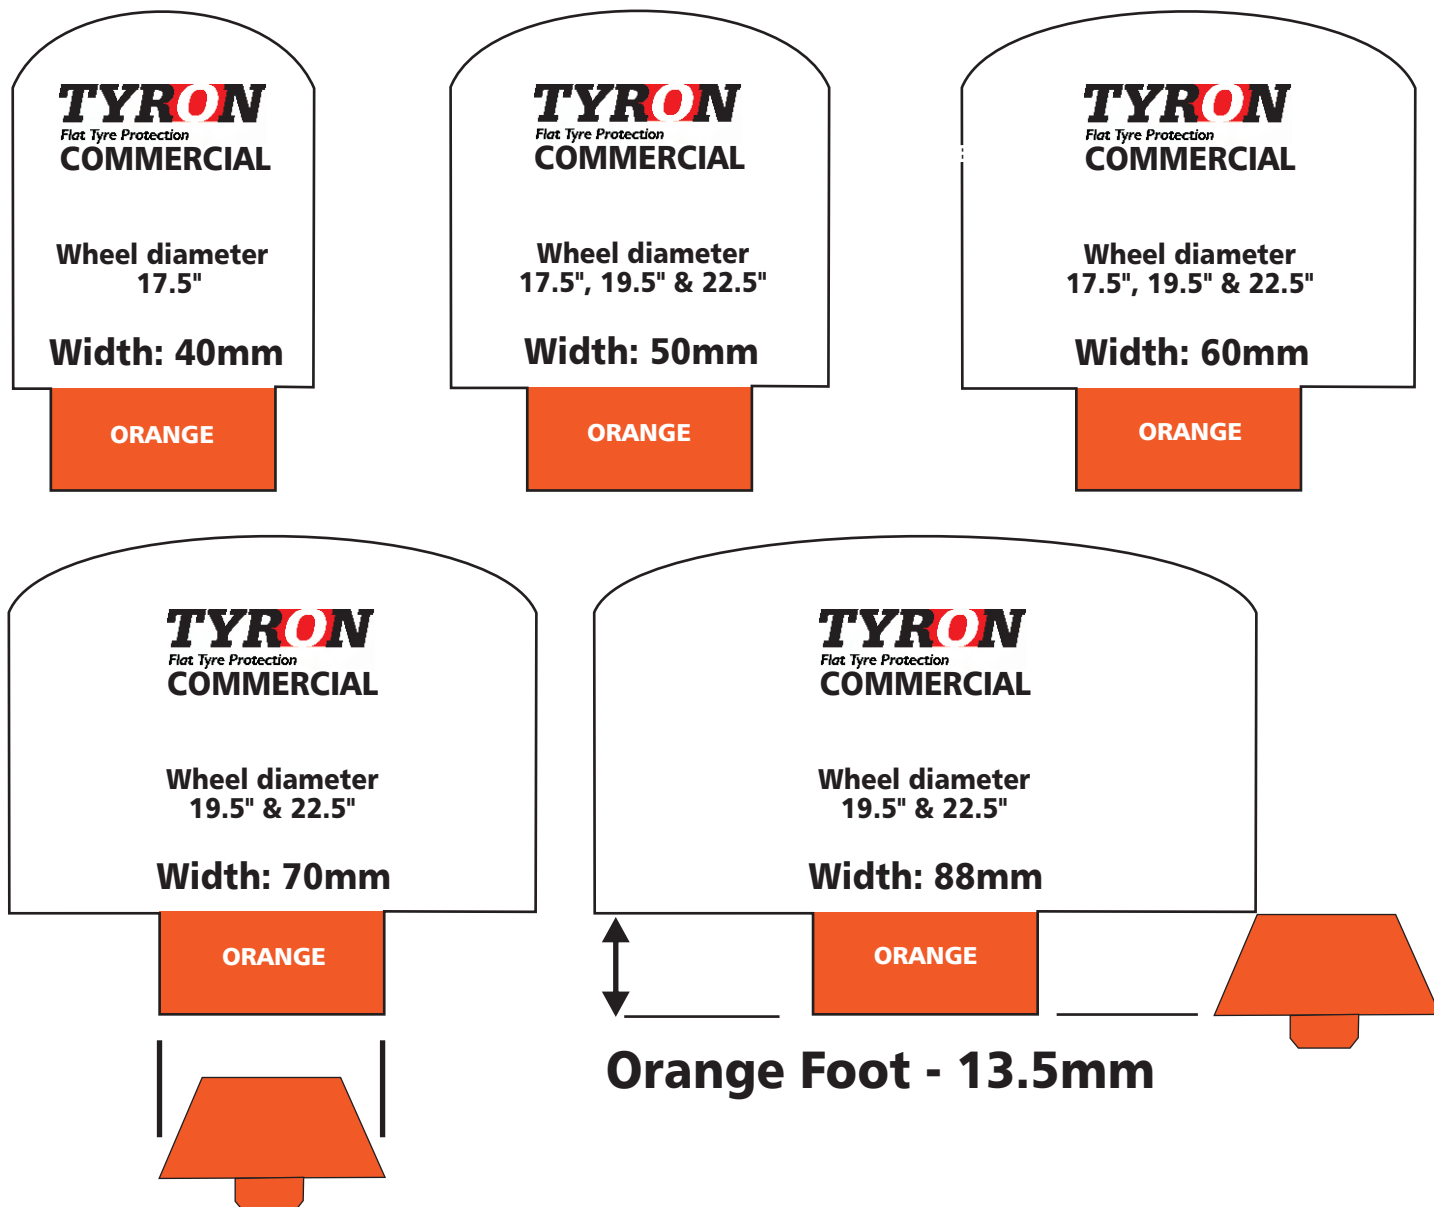






IMPORTANT
The base of the key **MUST** sit squarely on the bottom of the wheel's well.

VERY IMPORTANT
Ensure that the keys are the correct size when printed by checking the scales below



TYRON Sizing Keys

Flat Tyre Protection for COMMERCIAL Multibands

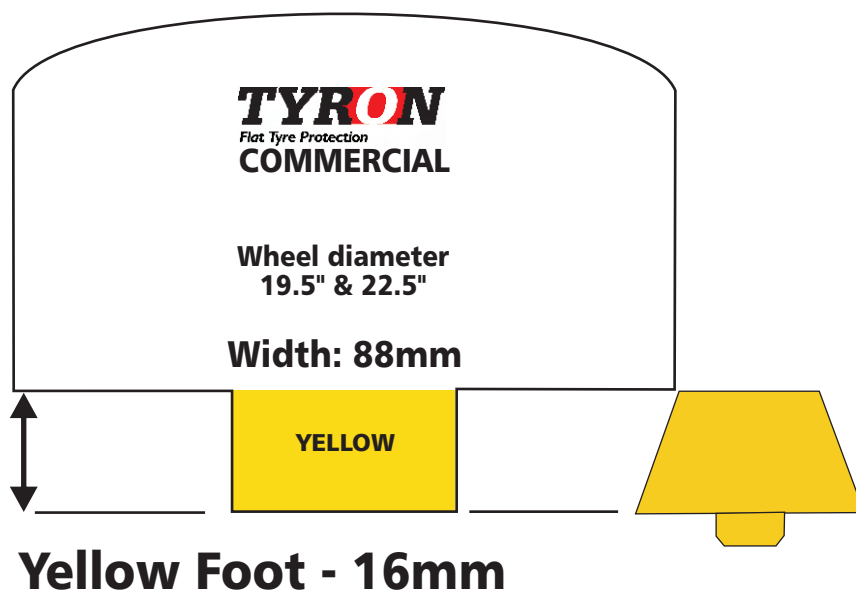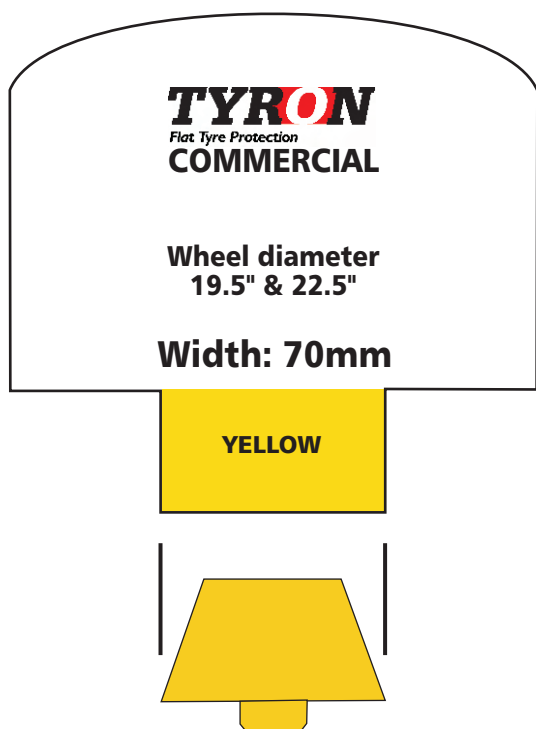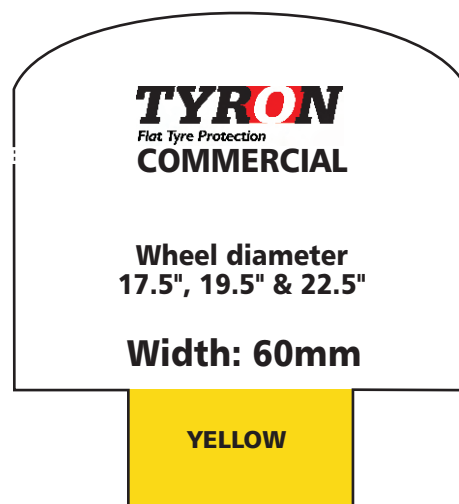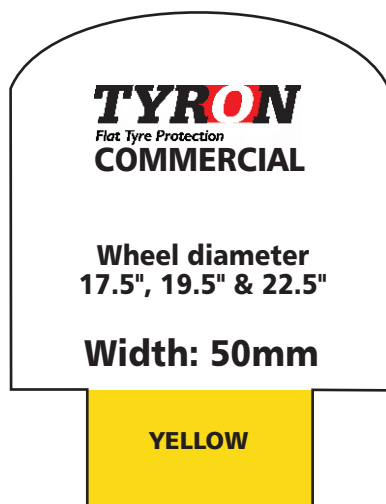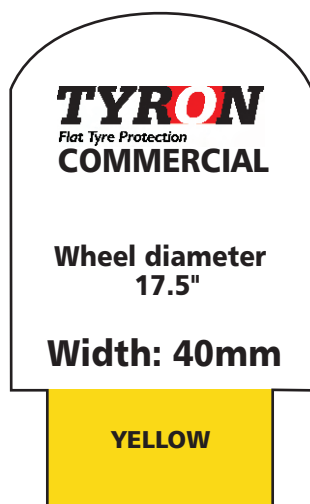


IMPORTANT
The base of the key **MUST** sit squarely on the bottom of the wheel's well.

VERY IMPORTANT
Ensure that the keys are the correct size when printed by checking the scales below



TYRON Sizing Keys

Flat Tyre Protection for **COMMERCIAL** Multibands

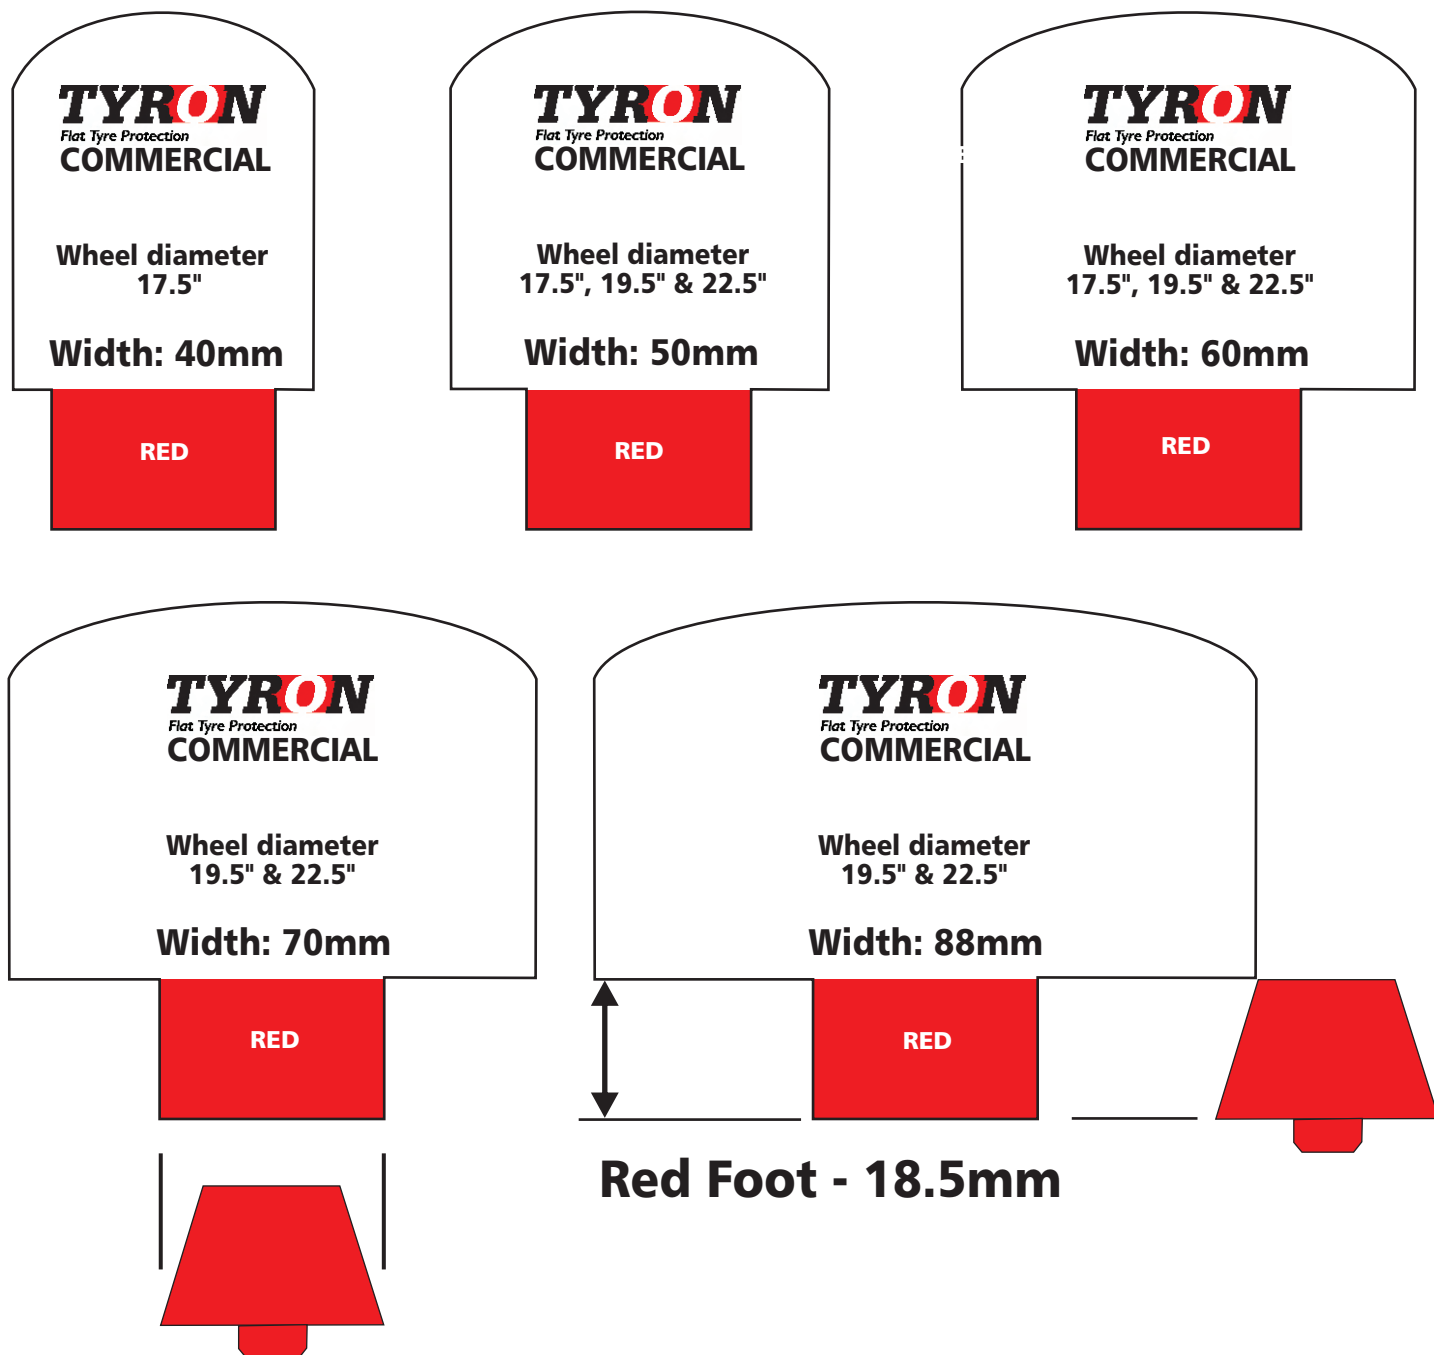

IMPORTANT

The base of the key **MUST** sit squarely on the bottom of the wheel's well.

VERY IMPORTANT

Ensure that the keys are the correct size when printed by checking the scales below

